


Clearflo Retrofit Toe-tap Conversion Kit K-7142

Features

- Intended to replace existing overflow cover and stopper/drain, flange/toggle linkage
- Toe-tap component installs on most drain bodies with 1-1/2"-11 1/2 NPSM thread
- For KOHLER drains K-7160-AF, K-7160-TF, K-7161-AF, K-7193
- Metal construction

Recommended Products/Accessories

K-7193 Bath Drain K-23723 Faucet cleaner

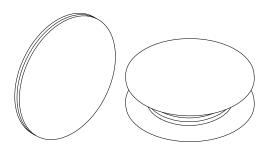

Codes/Standards ASME A112.18.2/CSA B125.2

KOHLER[®] Faucet Lifetime Limited Warranty

See website for detailed warranty information.


Available Colors/Finishes


Color tiles intended for reference only.



KOHLER, Faucets

Clearflo Retrofit Toe-tap Conversion Kit K-7142

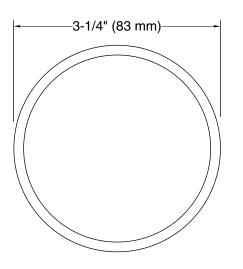

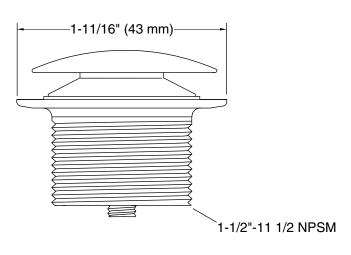

Overflow Cover

Toe-Tap

Technical Information

All product dimensions are nominal.

Notes

Install this product according to the installation instructions.

IMPORTANT! This installation should be performed by a qualified plumber. IMPORTANT! Provide access to the back of the bath. Removing the existing overflow cover may effect the seal. Inspect the back of the bath for leaks after completing this retrofit installation.

