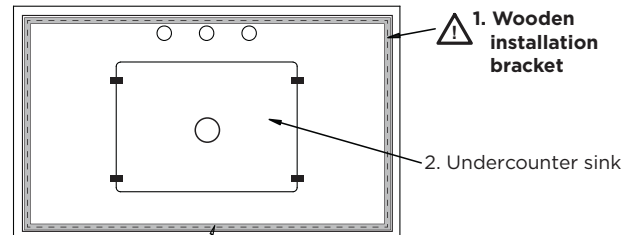
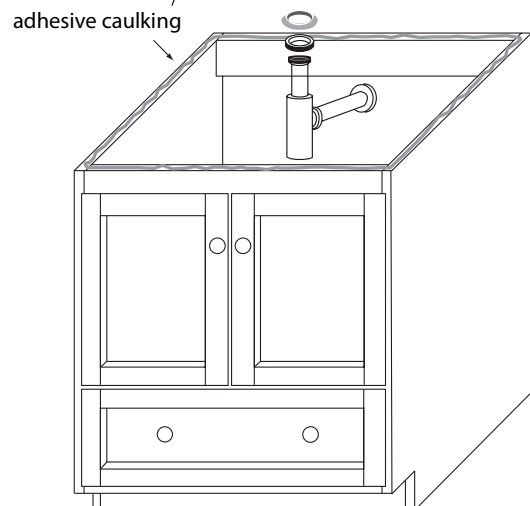


Model:	303325	303349	363337	304449	306632	306648	306662
	303331	303361	363343	364449	366632	366648	366662
	303337	363325	363349	306624	306637	306659	
	303343	363331	363361	366624	366637	366659	

Countertop


Step 1 : DO NOT DISCARD WOODEN INSTALLATION BRACKET!

- Make sure wooden installation bracket is safely secure
- Install under counter sink by following specific sink installation

See Figure 1.**Figure 1.****Figure 2.**

- Step 2 :**
- For best results, clean the mounting surfaces with a dry cleaning cloth
 - To prevent over flow of adhesive, use masking tape to tape off the edges of the cabinet and the counter top

Step 3 : Apply adhesive on wood bracket and mounting surfaces of the cabinet

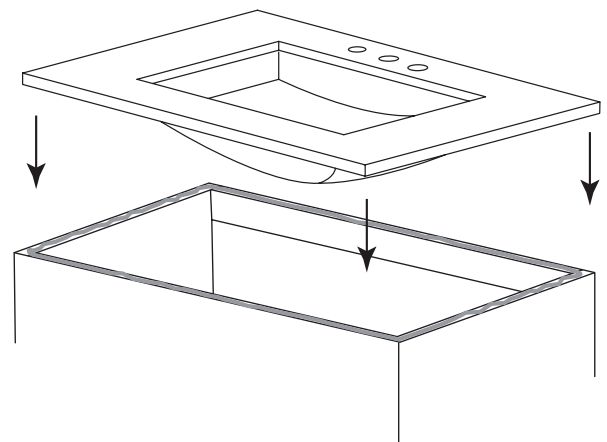See Figure 2.**Figure 3.**

Step 4 : Carefully place countertop on to the cabinet, align, and press firmly

See Figure 3.