


TOILET PAPER HOLDER

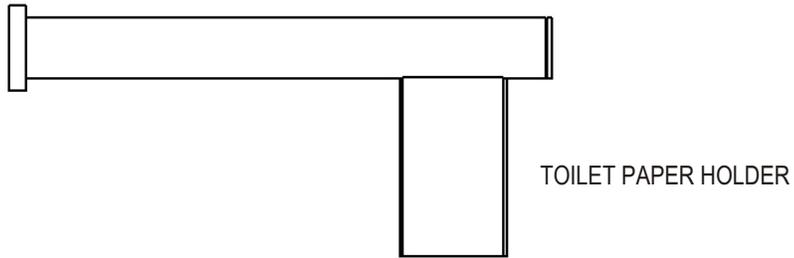

TOILET PAPER HOLDER



MOUNTING SCREW BRACKET



SET SCREW



MOUNTING SCREWS (2)



DRY WALL ANCHORS(2)




ALLEN KEY

INSTALLATION INSTRUCTIONS

3965CI__

- 1- Take the toilet paper holder out of the box.
Place the post against the assigned wall location.
Make sure that the holder is leveled and pointed to the right.
Mark the holder post position and remove the trim.

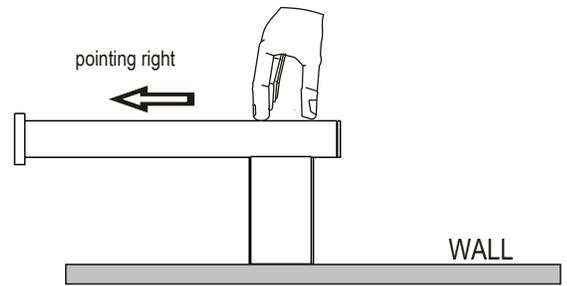


- 2- Using the Allen key provided, remove the mounting screw bracket from the holder post.

Press the mounting screw bracket against marked post position on the wall and mark the screw hole positions.

2a- INSTALLING ON WOODEN SURFACE

- For wooden surface, the mounting screw bracket can be secured by screwing the screws directly into the wall.


WOODEN SURFACE

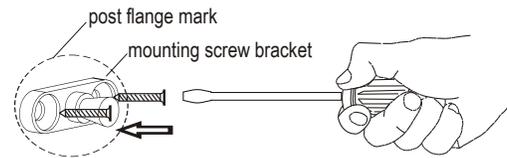

2b- INSTALLING ON A DRYWALL

- Using a drill, pre-drill holes for the anchors.
- Insert the anchors into the wall.
- The mounting screw bracket can be secured by screwing the screws into the anchors.


DRY WALL SURFACE

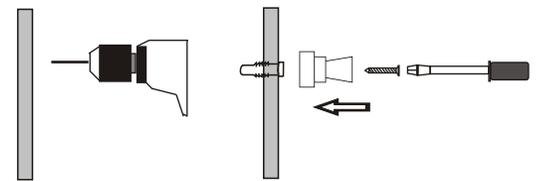

2c- IF INSTALLING ON A SOLID/HARD SURFACE


- Measure the dimensions carefully.
- Using a drill, pre-drill the holes.
- Secure the mounting screw bracket by screwing the screws into the wall.

HARD SURFACE

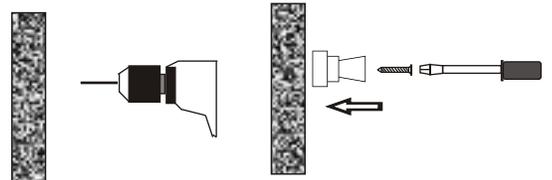

- 3- Press the post against the mounting screw bracket. Align the holder and secure it by tightening the set screw.

- 4- Check the holder post to make sure it is firmly secured. If not, tighten the set screw with the Allen key.

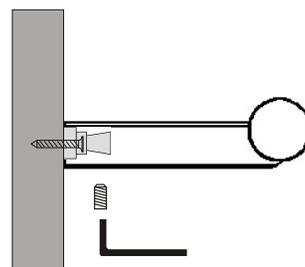

Santec Inc.
3501 Challenger Street, Torrance, CA 90503
Tel: (310) 542-0063 Fax (310) 542-5681
www.santecfaucet.com